


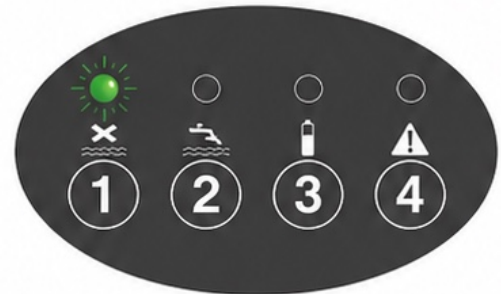
3.1 MAIN MODES

For your safety and comfort, your device has 2 main modes.

1. MONITORING MODE:

PRECISIO monitors the pool: the green  light flashes quickly.

The siren emits a 100 dB signal triggered by the fall of a body weighing at least 6 kg into the pool.



Monitoring mode


2. SWIMMING MODE:




Please pay attention to the fact that PRECISIO will not monitor the pool in "SWIMMING MODE". This includes:

- when the pool is used by one or more people.
- during a period of approximately 10 minutes (or more) after leaving the pool, until the water surface becomes calm and PRECISIO automatically switches back to "MONITORING MODE".
- in case of strong wind or a few minutes after strong gusts of wind, when PRECISIO cannot monitor the pool normally.

NEVER LEAVE THE POOL WITHOUT SUPERVISION WHEN SWIMMING MODE IS ACTIVE

PRECISIO does not monitor the pool: the red  light flashes quickly.

The alarm will not trigger even if someone or something falls into the pool.

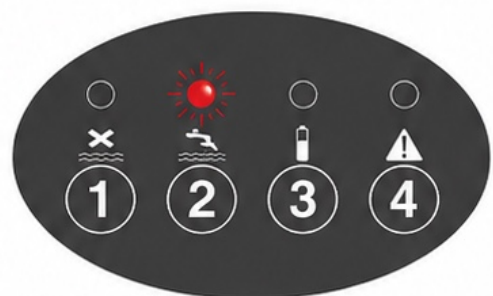



Swimming mode

It is possible that your device switches to "MONITORING MODE" if you stay in the pool without causing any water disturbances.

3.2 I WISH TO SWIM

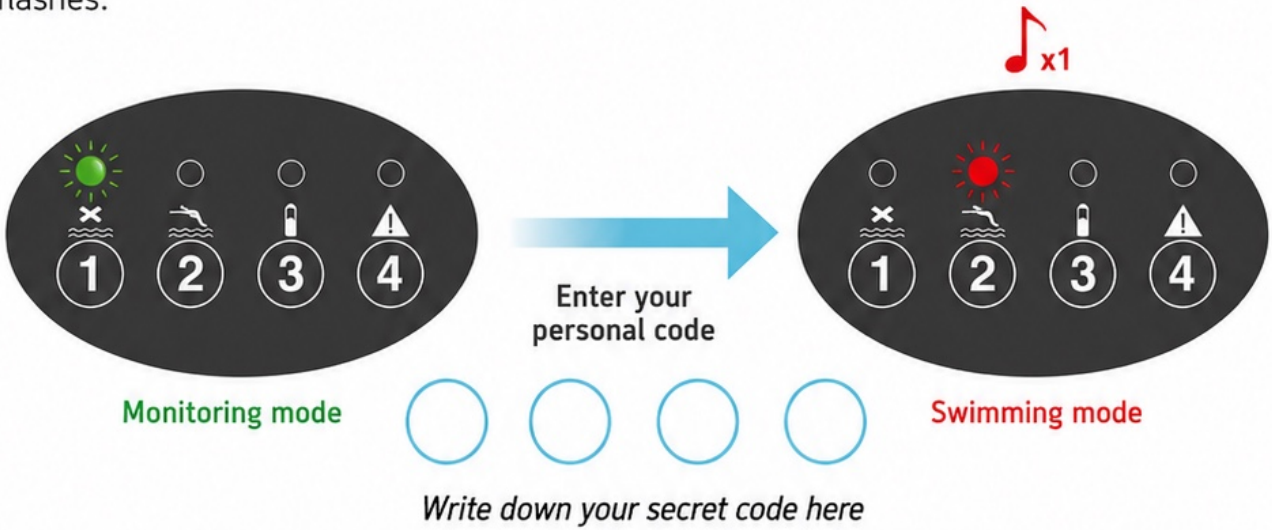

The detection system is active: "MONITORING MODE" is on, the green  light flashes.




Enter your personal code (default 1234): "SWIMMING MODE" is activated, the red  light flashes and a long beep sounds: **YOU CAN SWIM.**

3.3 AUTOMATIC RETURN TO MONITORING MODE

After swimming mode, the pool is not monitored until the automatic reactivation of the monitoring system, which occurs once the pool water has become calm again.

Usually, reactivation takes place after about 10 minutes, depending on the agitation of the water and wind conditions. A short beep is then emitted and the  and  lights flash alternately.

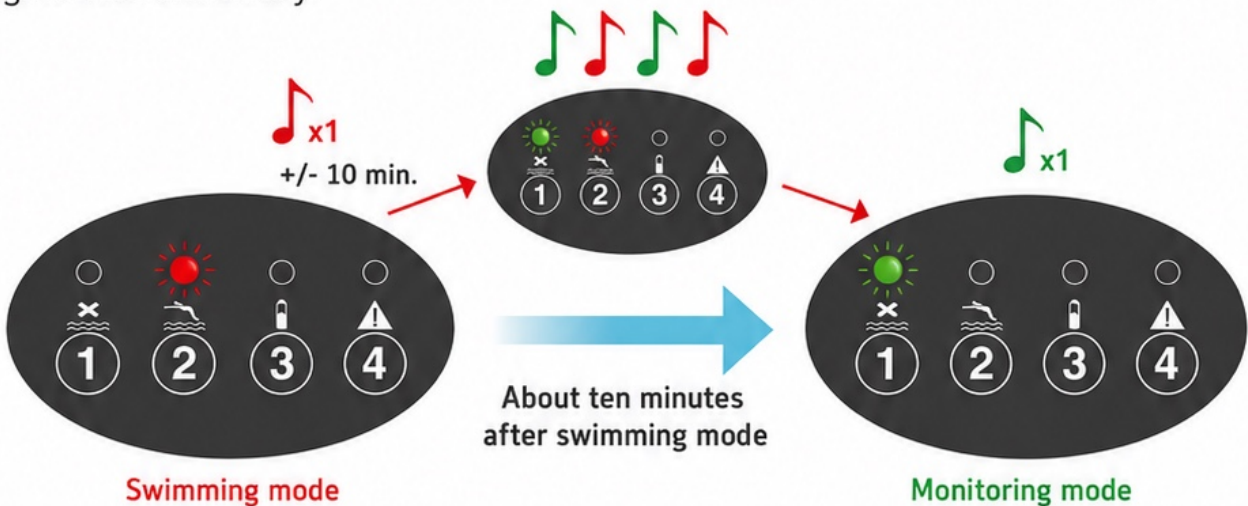

DURING THE TIME OF AUTOMATIC REACTIVATION, POOL SUPERVISION BY A RESPONSIBLE ADULT IS MANDATORY.


3.4 MANUAL RETURN TO SERVICE (pool sufficiently calm)



Once you have left the pool, press 2 times on any key of the control panel (example: 1 + 1, 2 + 2...)

① ① OR ② ② OR ③ ③ OR ④ ④

CASE 1:

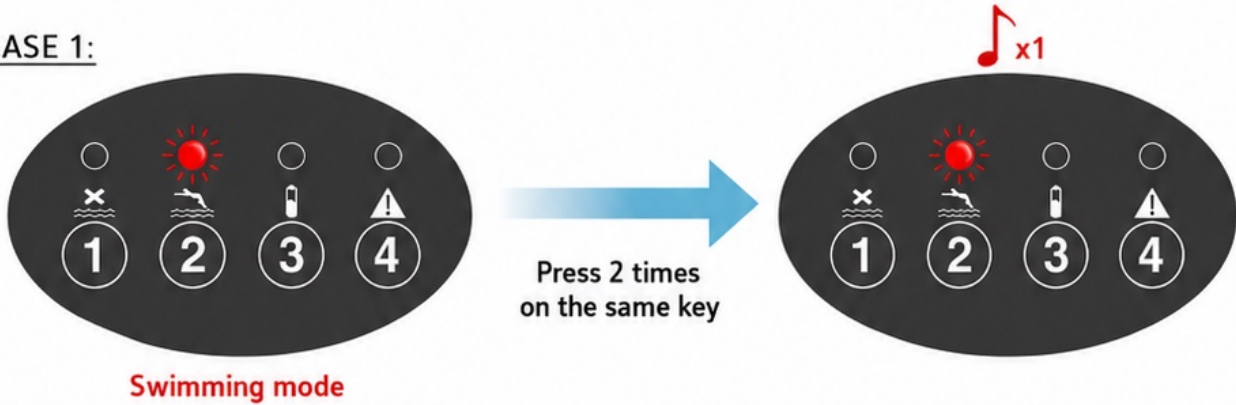


If a short long beep sounds and the  light stays red, your alarm system considers that your pool is too agitated: it cannot immediately return to monitoring mode. WAIT UNTIL THE POOL IS CALM AND THEN REPEAT THE OPERATION.



IN THIS CASE, POOL SUPERVISION BY A RESPONSIBLE ADULT IS MANDATORY. THE POOL IS NOT MONITORED.

CASE 2:

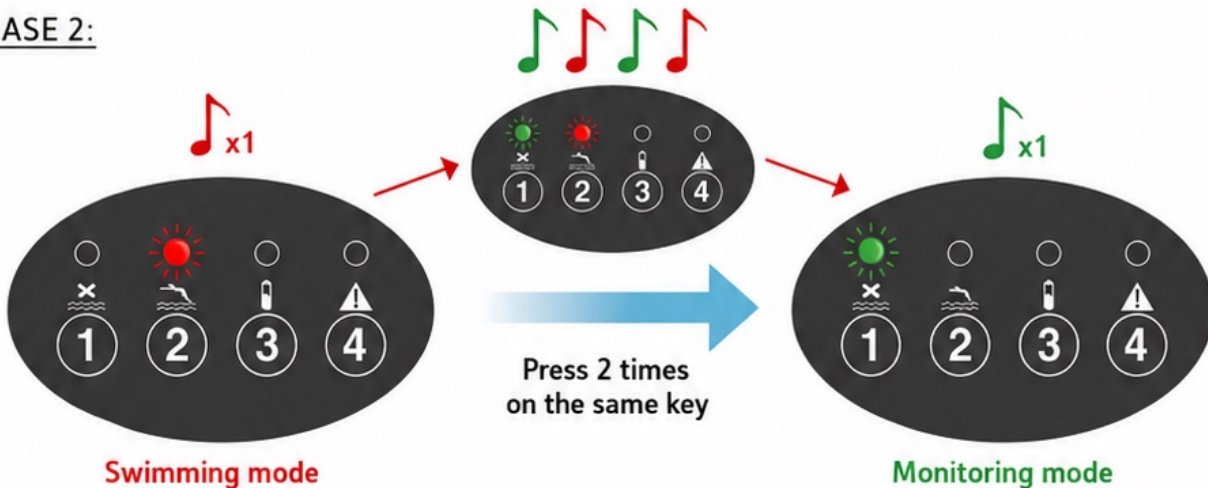

If a long continuous beep sounds and the  light is red and the  light is green flashing alternately, your alarm system considers your pool is gradually calming down: MONITORING WILL RESUME ONCE THE POOL IS COMPLETELY CALM.




IN THIS CASE, POOL SUPERVISION BY A RESPONSIBLE ADULT IS MANDATORY. THE POOL IS NOT MONITORED. ONLY LARGE FALLS ARE DETECTED.

3.5 TOTAL ALARM SHUTDOWN



Complete shutdown of the control unit is obtained by entering the following sequence:

3 + 4 + 3 + 4 + 3 + 4.

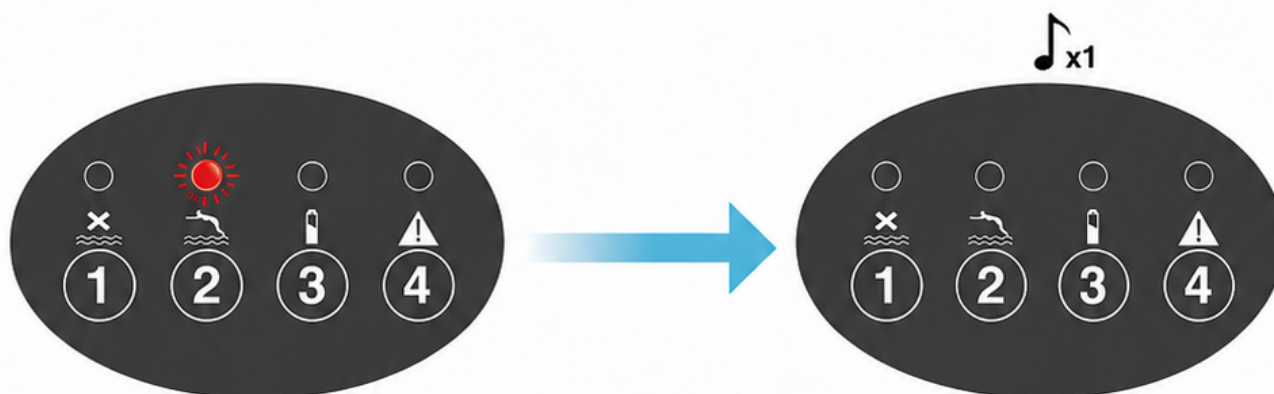

Shutdown is necessary to change the batteries (recommended at the beginning of the season) or for any operation requiring disassembly of the device. **To restart the alarm, enter your personal code.**



THE USER WHO SHUTS DOWN THE SYSTEM MUST BE AWARE THAT HUMAN SUPERVISION MUST TAKE OVER

POOL SAFETY INSTRUCTIONS

Your swimming pool is an extremely dangerous place for young children. Never forget that just a few seconds of inattention can have tragic consequences. A child can drown silently in just a few minutes in as little as twenty centimetres of water, even with active and constant supervision by adults.

Therefore, it is essential to never leave a child unattended and never take your eyes off them. The installation of your AQUALARM system does not in any way reduce your vigilance and active supervision of the pool. AQUALARM is a passive safety device which can provide assistance if your children escape your supervision, but you remain solely responsible for their safety.

Safety advice:

- Supervise children closely and constantly.
- Assign a single person to be in charge of safety.
- Increase supervision when several users are in the pool.
- Get wet, arms and legs before entering the water.
- Prohibit diving or jumping in the presence of young children.
- Prohibit running and rough play around the pool.
- Do not allow access to the pool without a life jacket or armbands for a child who is not a confident swimmer and who is not accompanied in the water.
- Do not leave any toys near the pool and in the pool when it is not supervised.
- This alarm is a safety device that signals a danger (or risk of danger). A quick intervention of less than 3 minutes by a responsible adult is mandatory when the alert signal sounds.
- The user who shuts down the system must be aware that human supervision must take over.
- It is essential to react when the failure signal sounds. • The greatest vigilance by the parent / responsible adult is necessary between the end of swimming time and the reactivation of the alarm.
- The performance levels as defined by standard NF P 90-307-1 are not guaranteed beyond wind levels higher than those specified in this standard.
- During the time of automatic reactivation, the responsible adult must supervise the pool by staying at the edge of the pool, for the time necessary for the system to resume monitoring. The effective reactivation occurs when the green light flashes.
- Keep an accessible telephone near the pool to avoid leaving your children unsupervised when you use the phone.

IN CASE OF AN INCIDENT:

- Remove the child from the water as quickly as possible.
- Call emergency services immediately and follow their instructions.
- Replace wet clothing with warm blankets.

EMERGENCY NUMBERS:

<p>EMERGENCY NUMBERS TO KNOW IN CASE OF EMERGENCY</p> <p>EMERGENCY CALLS ARE FREE 24/7 THROUGHOUT THE EUROPEAN UNION</p>	<p>112</p> <p>EUROPEAN EMERGENCY NUMBER</p> <p>If you are a victim or witness of an accident in a European country</p>	<p>15 SAMU</p> <p>EMERGENCY MEDICAL SERVICE</p> <p>For any emergency medical situation, 24/7 medical assistance provided by the emergency call centre (regulation of care and ambulance dispatching)</p>
<p>114</p> <p>EMERGENCY NUMBER FOR PEOPLE WHO ARE DEAF OR HARD OF HEARING</p> <p>If you are a victim or witness of an emergency situation requiring the intervention of emergency services. Number accessible by fax and SMS.</p>	<p>17</p> <p>POLICE EMERGENCY</p> <p>To report a situation requiring police intervention immediately</p>	<p>18</p> <p>FIRE AND RESCUE SERVICES</p> <p>For all emergencies related to risks of fire, accidents and natural disasters (assistance to victims and protection of property and the environment)</p>